


Example


IPQ40xx UI setting

- 1) input the IP: 192.168.1.1 and login;
- 2) Input the username: root; password: asdf1234, then press the button "Login",

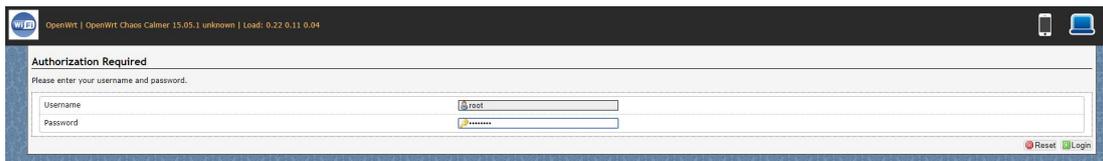


3) network setting

- IP Setting: setting IP in the path "network->Interfaces->LAN->IPv4 address"
- DHCP setting:DHCP and other protocol setting in the path network->Interfaces->LAN->protocol"

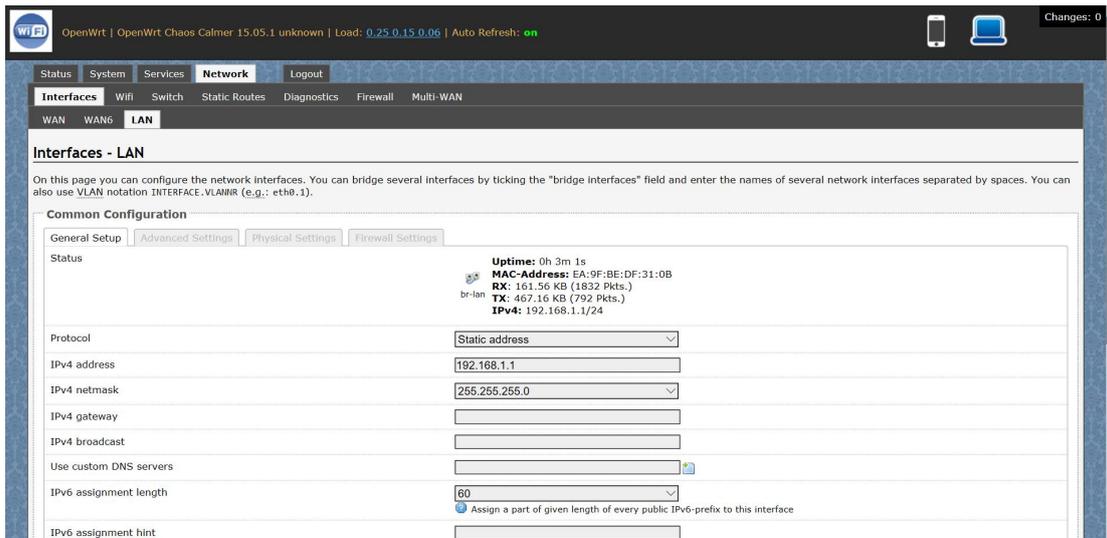


4) wireless setting


- login the path network->Interfaces->WIFI, then choose one wifi,we select the red marked as example,click the button 'Edit'

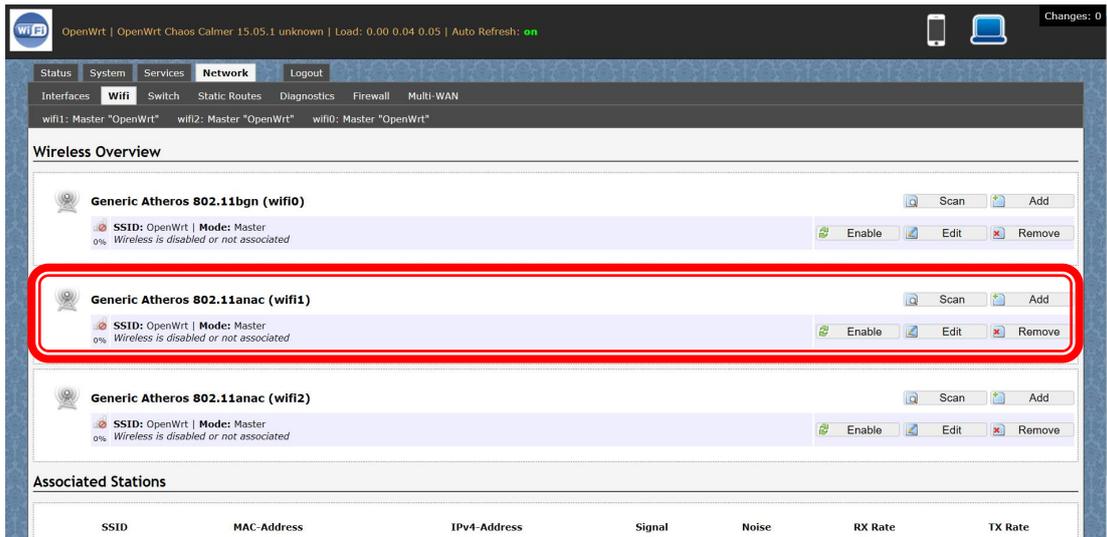

- The detail information show in the picture as below:
 - Channel:for channel select;
 - Transmit Power:signal chain power setting;
 - ESSID:for ID
 - Mode:it support 4 mode AP,AP(WDS),client,client(WDS)
 - Wireless Security:for Encryption setting

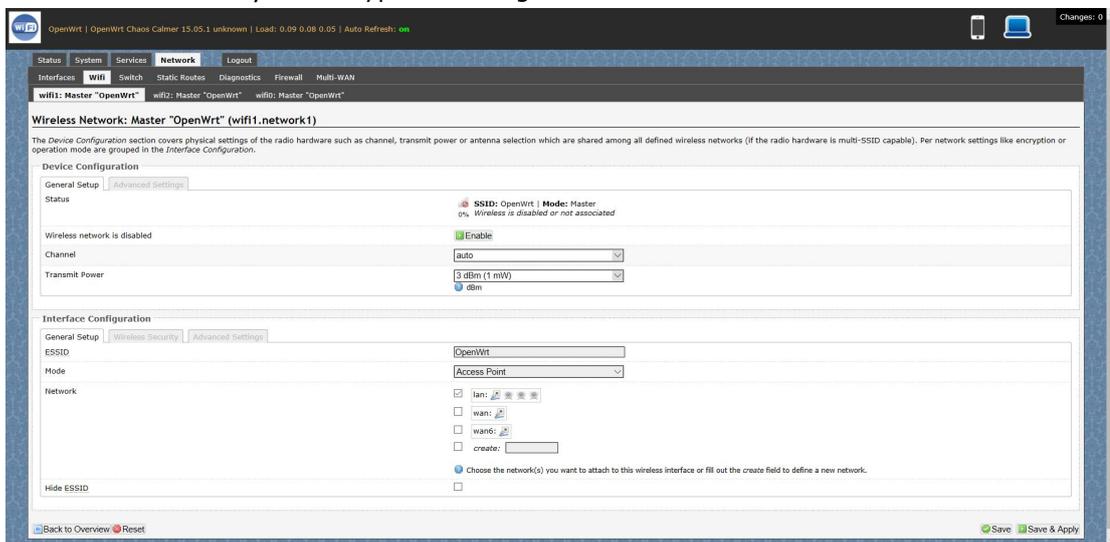

on
 IN Advance setting you can select which chain do you need,which BW do you need and so

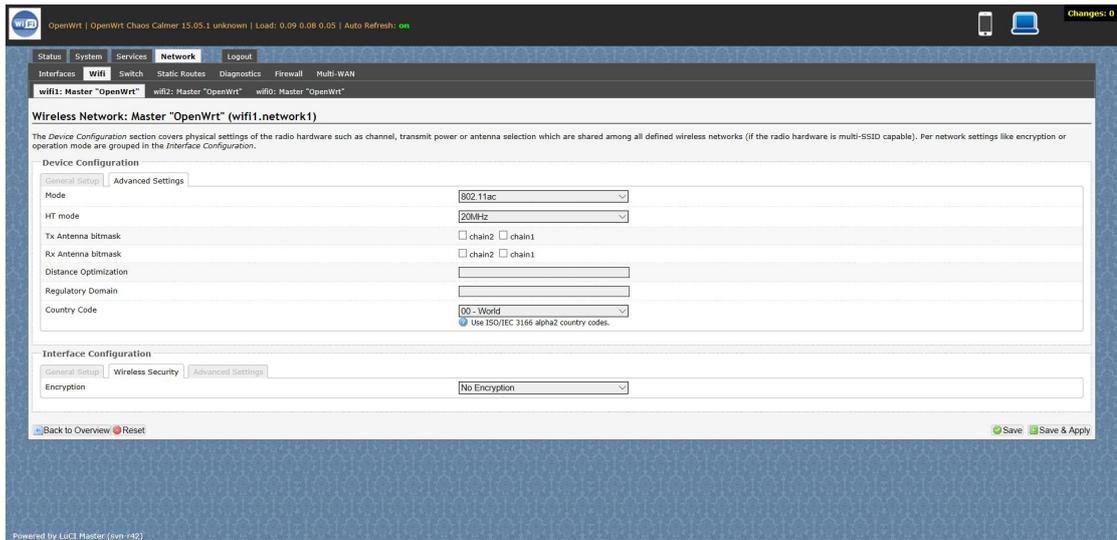


In the end ,you need click the button “Save & Apply”, and wait for 2 minutes, then you can enjoy it.

5) Backup archive


Login System->Backup/Flash Firmware;

Then click the button”Generate archive”;


Then download the archive

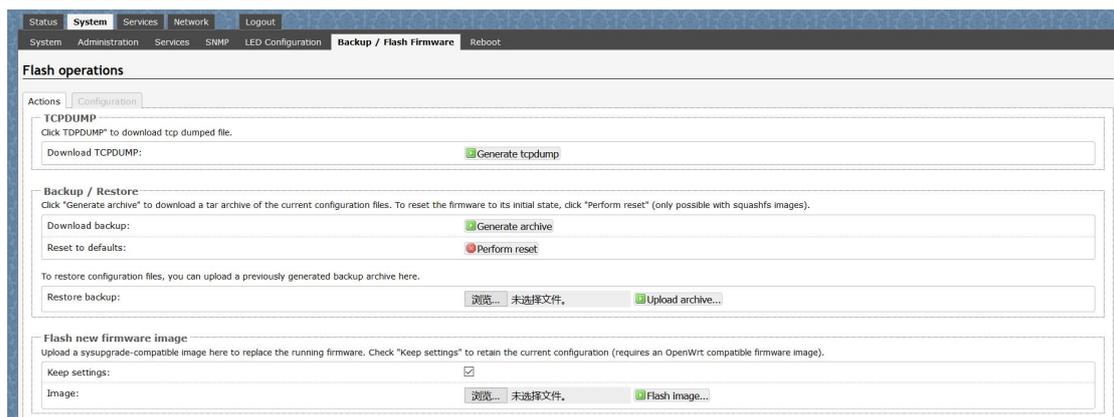

6) 5M config, quarter rate

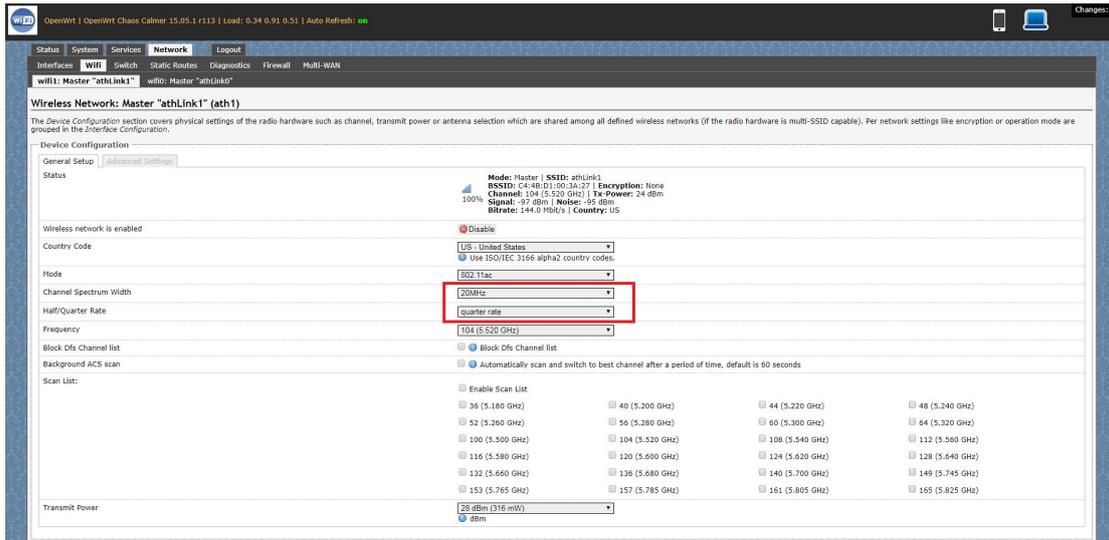

10M config, half rate

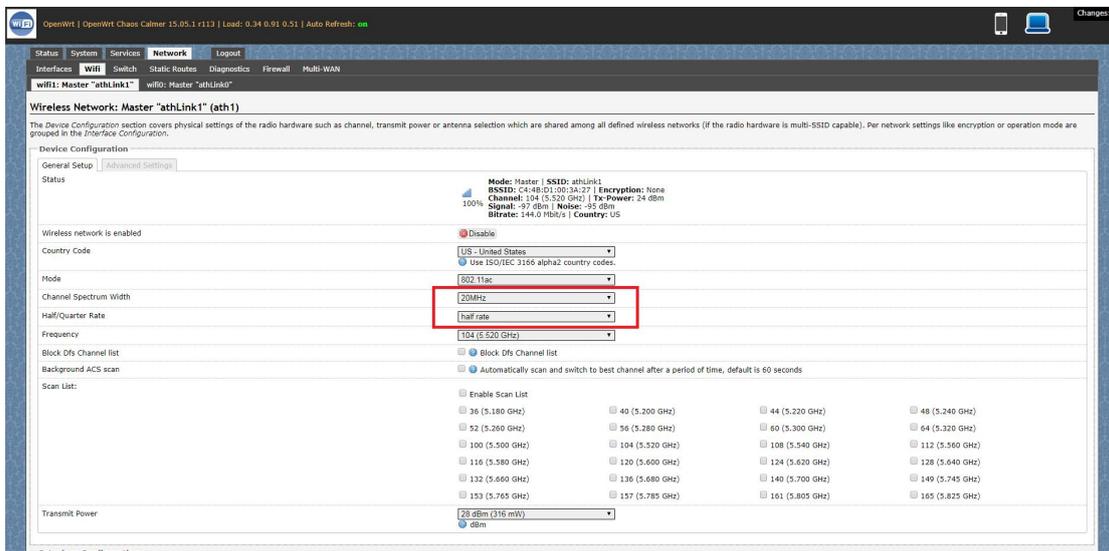

7) Advanced settings for long distance transmission

